

Heavy Duty Light Mount

Parts List: (Refer to Fig 1a.)

- 1 x 22-0013 LIGHT BRACKET
- 1 x 22-0356 SECURITY KEY (Grey)
- 2 x 22-0347 M6 x 25 SECURITY BOLT
- 2 x 22-0043 M6 FLAT WASHER
- 2 x 22-0132 M6 SPRING WASHER
- 2 x 22-0575 M6 SLUG NUT
- 1 x FITTING INSTRUCTIONS

PROCEDURE : Fitting Kit to Cross Bars

STEP 1: Preparation of Cross Bar

A. Position where required and cut buffer strip to suit

STEP 2: Light Mount Pre Assembly

A. Attach Bolts and Slug Nuts loosely to the Light Mount including a spring washer and flat washer each.

B. Slide the Light Mount into the Upper Channel of the Cross Bar as shown in Figure 2a.

IMPORTANT: Make sure both Slug Nuts retain their cross-ways alignment within the channel. See figure 2b.

C. Tighten **both bolts** securely with the Security Key.

D. Re-install Buffer Strip. See figure 2c.

* Regularly check the tightness of the Bolts and the security of the load.

Fig 1a.

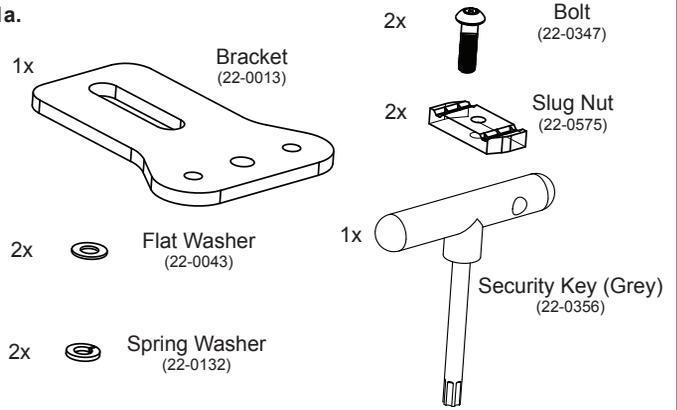


Fig 2a.

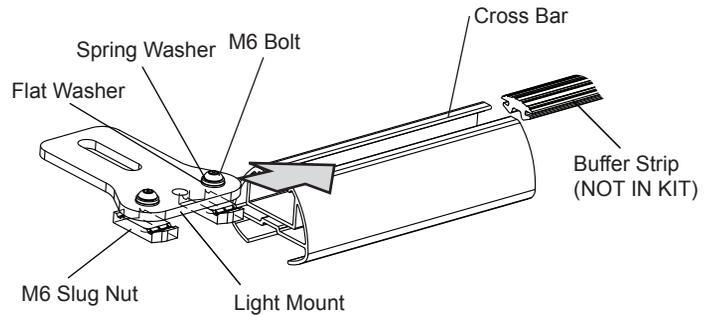


Fig 2b.


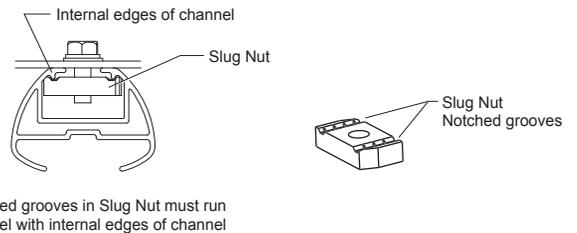


Fig 2c.

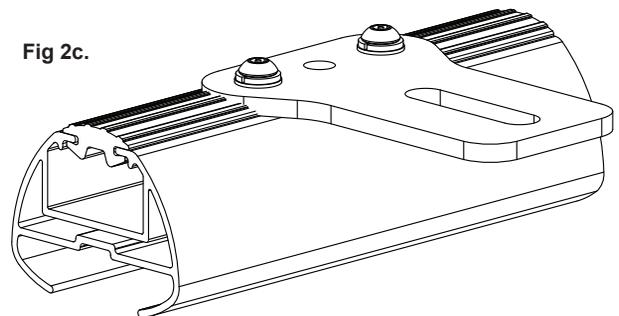

FAILURE TO FOLLOW THESE INSTRUCTIONS WILL VOID WARRANTY